


# メニューについて(つづき)


## メニューなどの表示言語を選ぶ

- メニューなどの画面表示を日本語にするか英語にするか選ぶことができます。

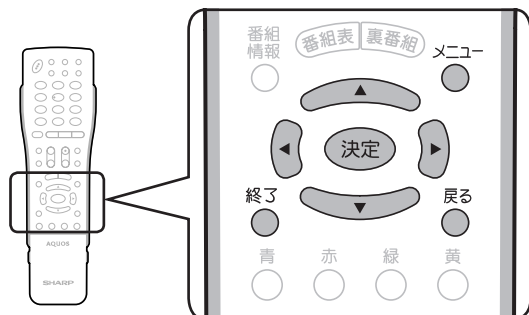


【例】 表示言語を英語にする

### 1 メニュー画面から「本体設定」→「Language(言語設定)」を選び、**決定**を押す

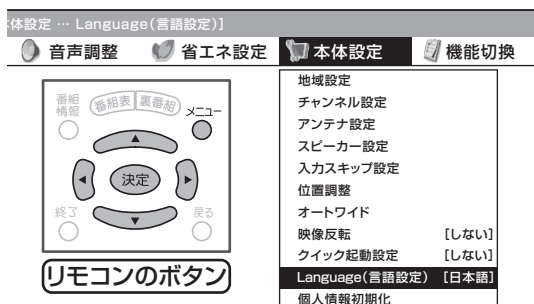

### 2 **決定**で「English」を選び、**決定**を押す

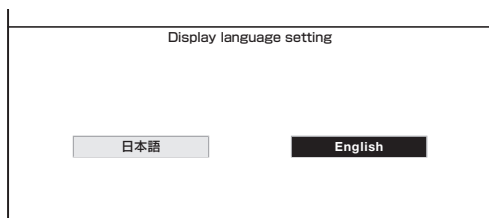

- 画面表示が英語になります。

#### 操作終了する場合は


- メニュー **決定** または **終了** を押し、通常画面に戻す
- 1つ前に戻る場合は **戻る** を押ししてください。

## Switching the Display Language to English


- Using the menu screen, you can switch the on-screen display language to English.

### 1 Press **メニュー** (menu) to display the menu screen.

### 2 Press **決定** to select “本体設定 (Language(言語設定))”, then press **決定** (enter).

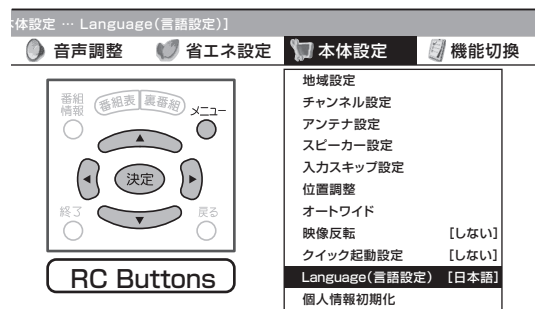

### 3 Press **決定** to select “English”, then press **決定** (enter).

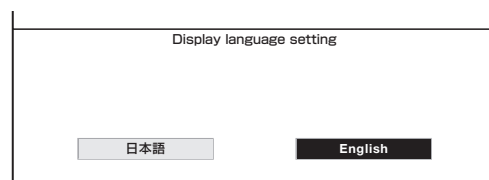


- The menu screen is now displayed in English.


#### To finish this operation

- Press **メニュー** (menu) or **終了** (finish) to return to normal screen.
- Press **戻る** to return to the previous screen.


# Part Names – Main Unit

■ The number shown in each  is the page number where the part's function and/or use are explained either in English or Japanese.

## Front view

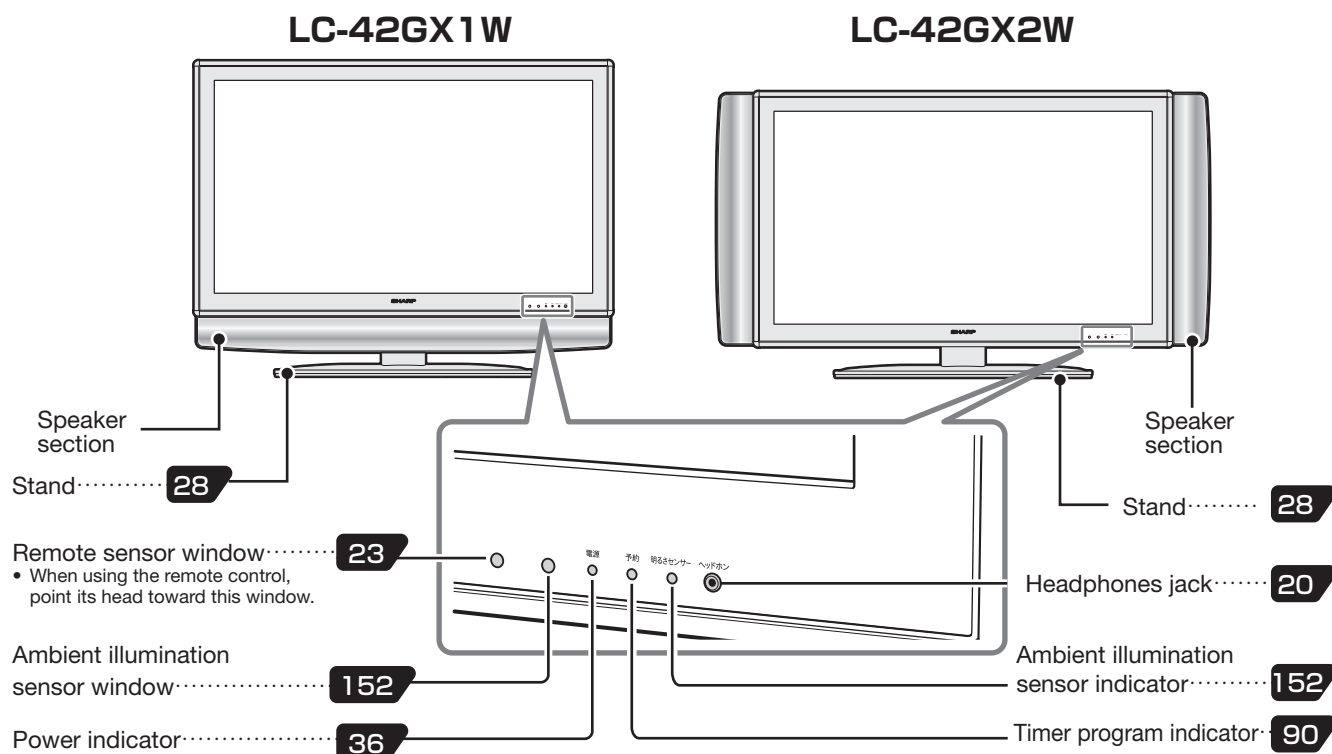


## Top view

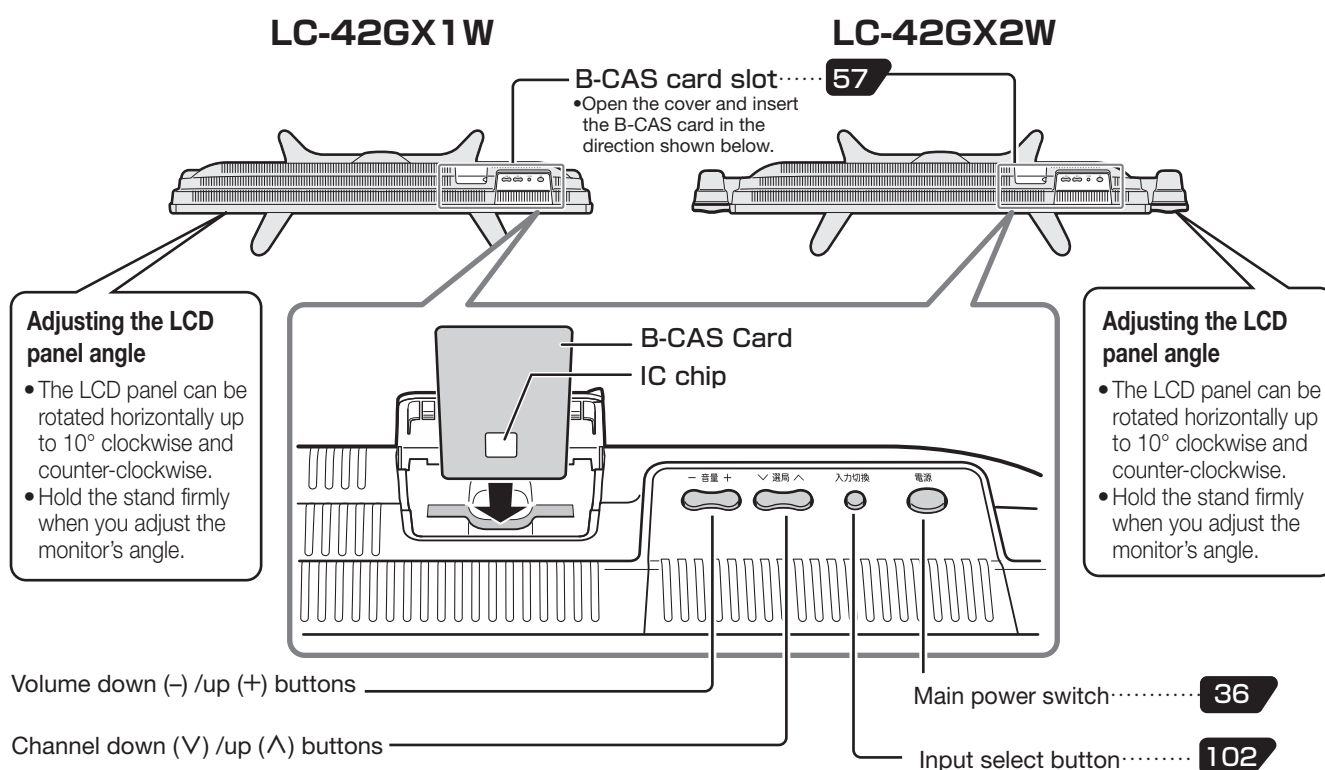


## Rear view


The illustrations below are those of LC-42GX1W. LC-42GX2W has the same layout of jacks and terminals as LC-42GX1W.

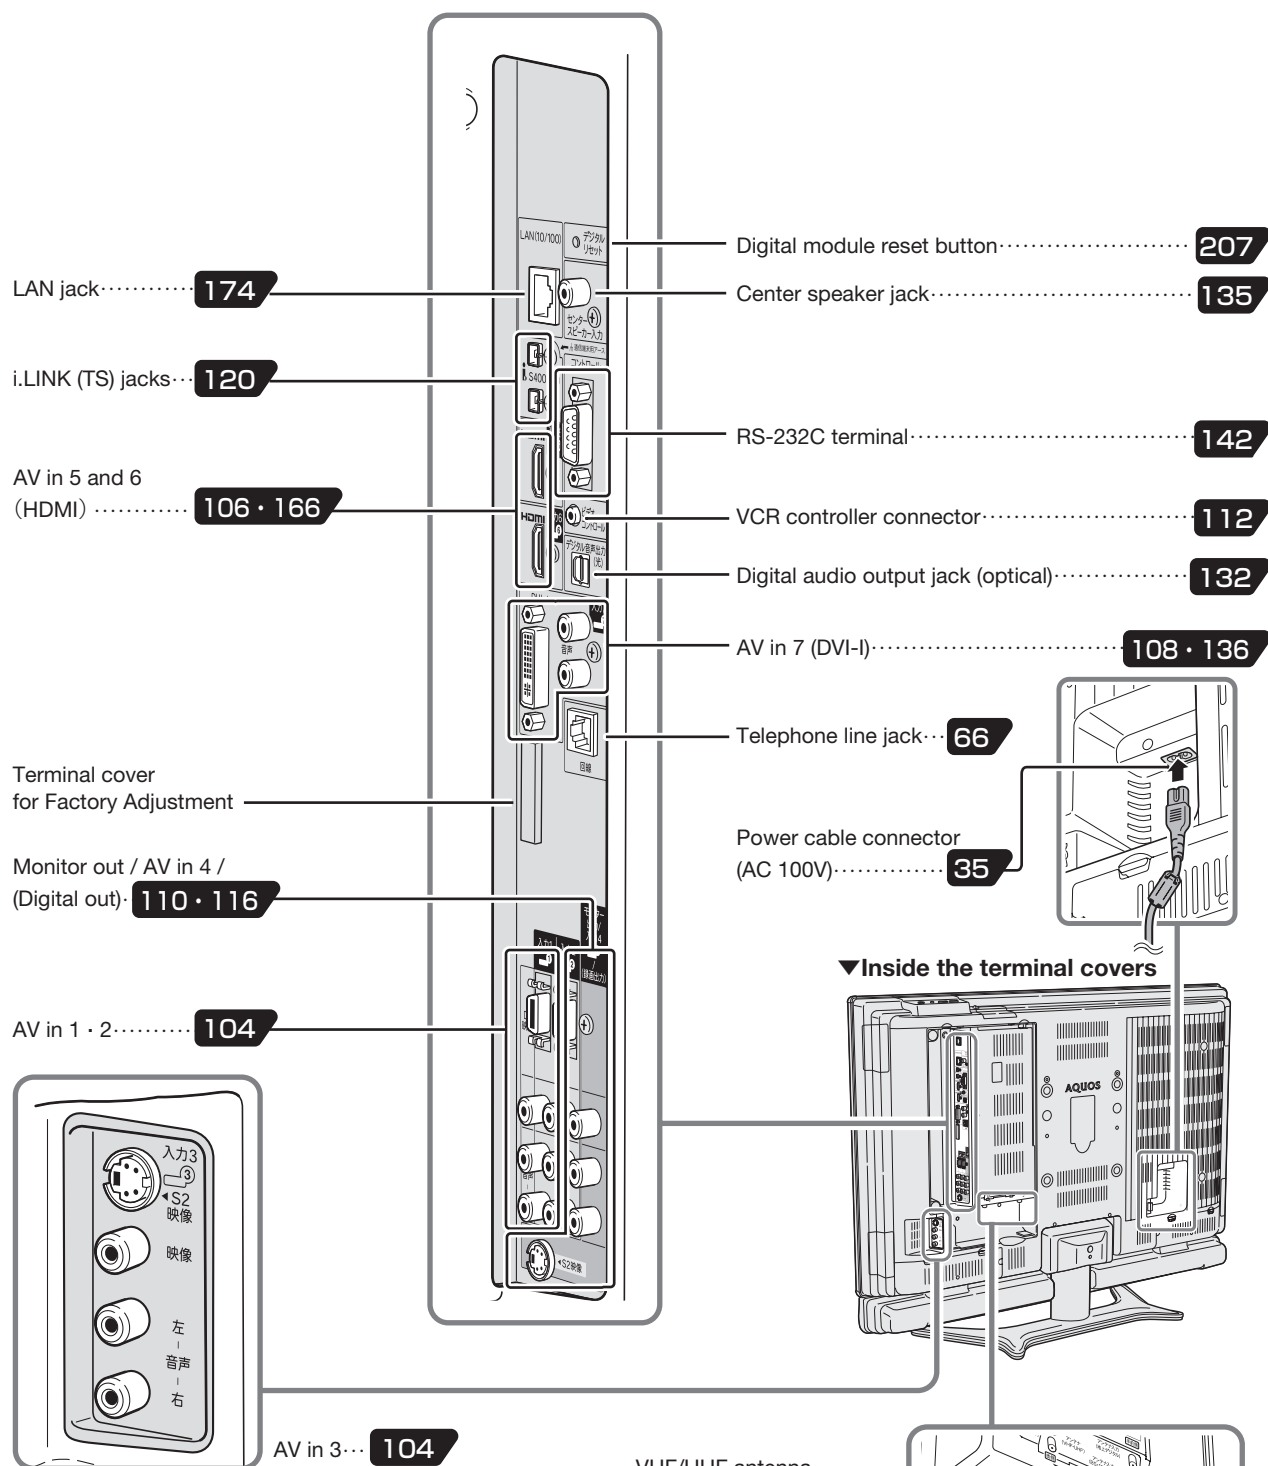

## Opening the terminal covers

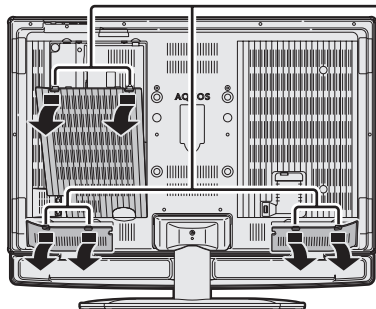


Holding the lock at the top of the cover downward, pull the cover off the back of the main unit.

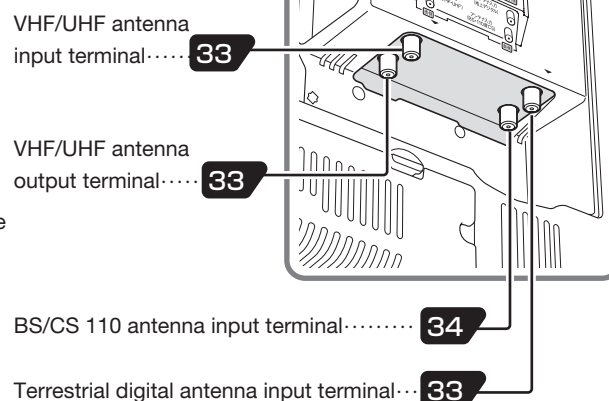

# Part Names — Remote Control Unit

## Cover closed

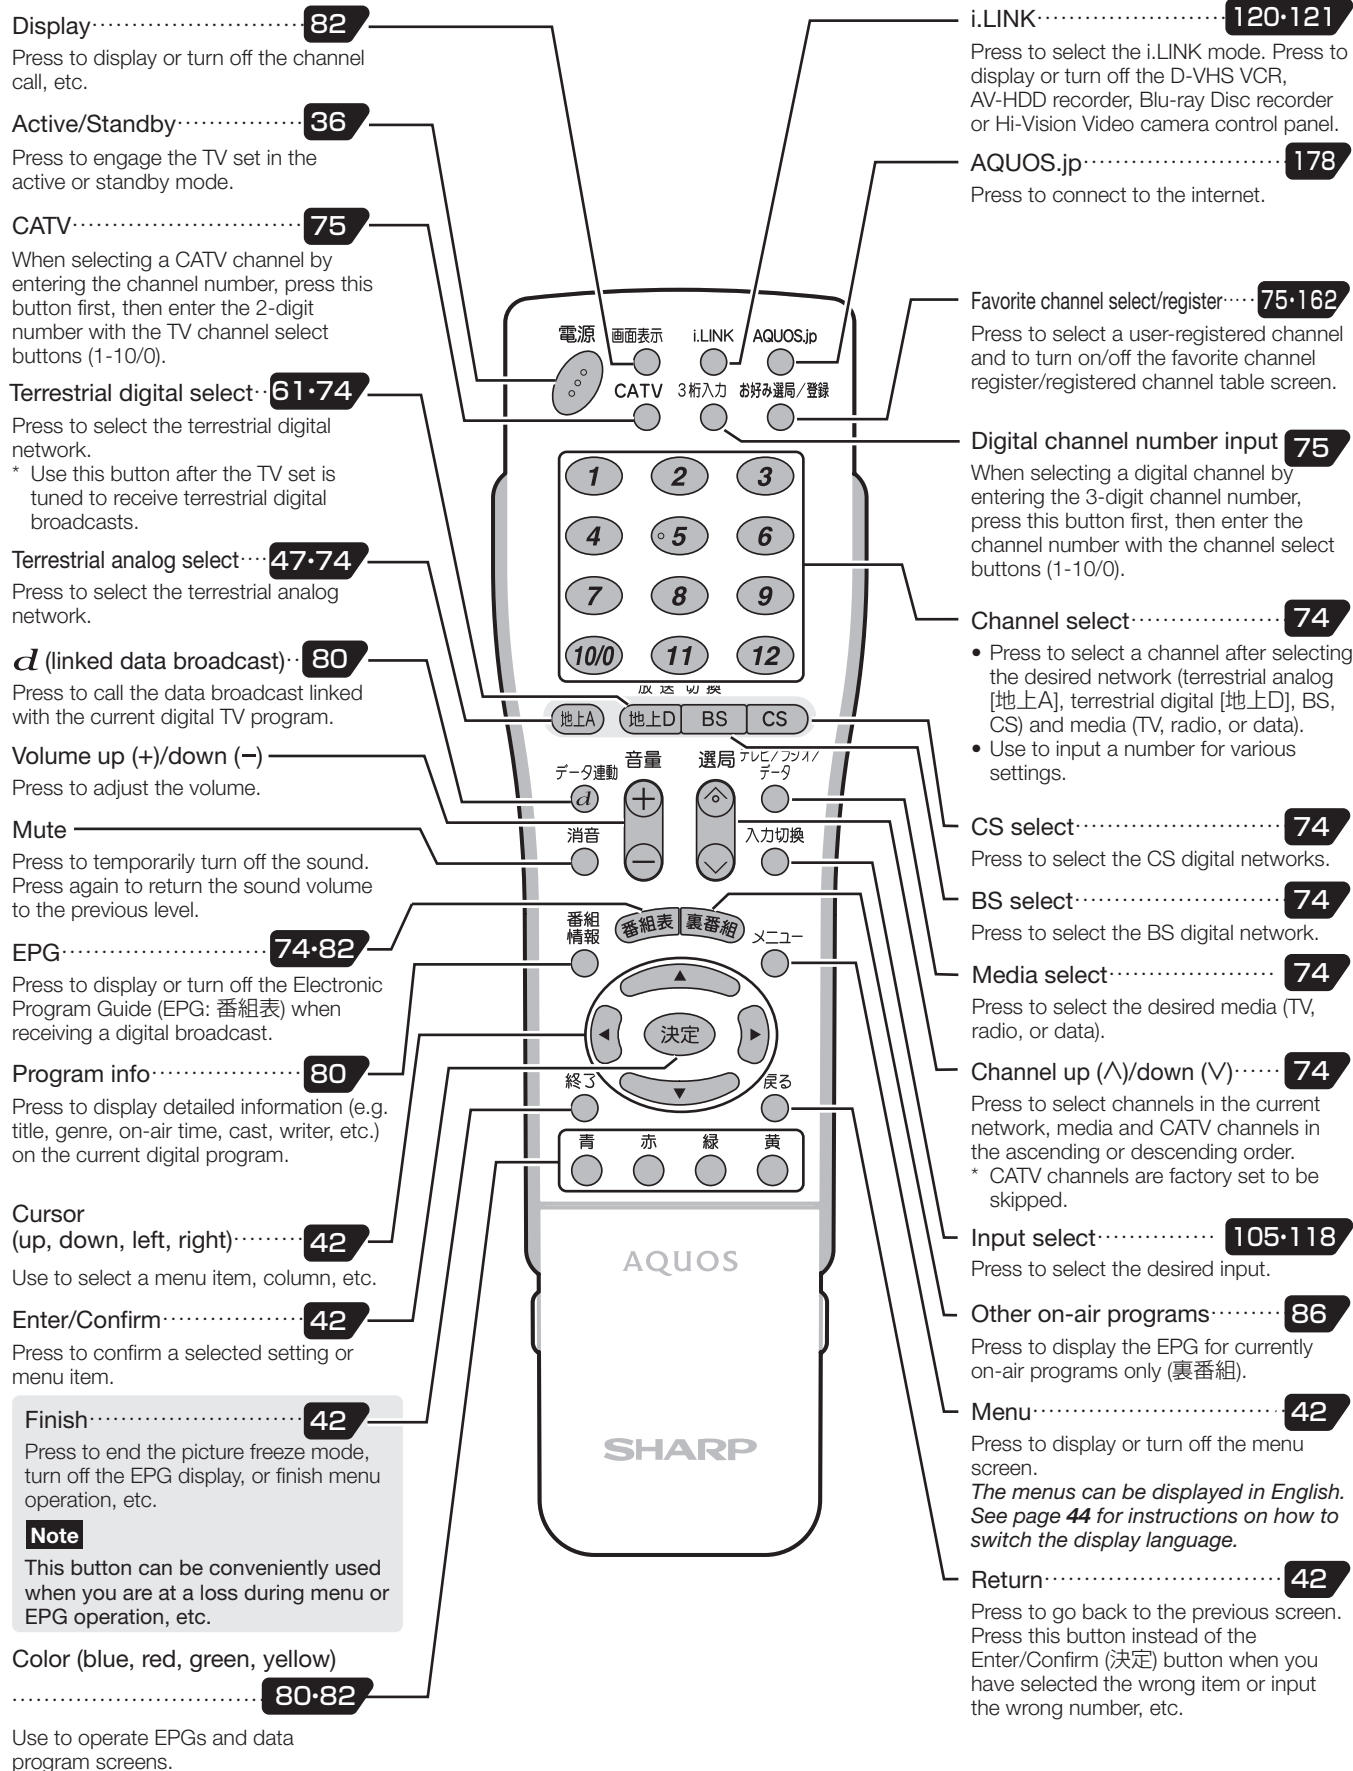

## Cover open

### Picture select.....79

Press to select the desired picture when watching a digital multi-picture program.

### Screen mode.....138·147

Press to select the desired screen mode.

### AV mode select.....151

Press to select the picture/sound setting (dynamic [locked], dynamic, standard, cinema, game, or AV memory) that best matches the current program.

### Freeze.....161

Press to freeze the picture.

### HDMI CONTROL.....165

Press to operate HDMI CONTROL Recorders and AQUOS Surround connected via HDMI cables.

### Caption.....195

Press to display, select, or turn off captions when watching a digital program with captions.

### Audio select.....79·156

Press to select the desired audio (e.g. Japanese or English in bilingual broadcast, the main sound or a sub sound in digital multi-sound broadcast, etc.).

### Operable screen.....160


Press to switch the operable screen (screen with the ♪ mark) when the TV set is in the split screen mode.

### Split screen.....160


Press to switch between the split screen mode and the normal screen mode.

### To open the cover

Hold the cover by the projections on both sides and lift upwards.

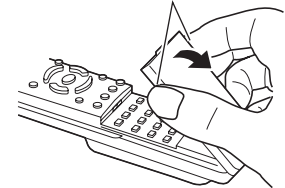

## Basic operation for channel selection

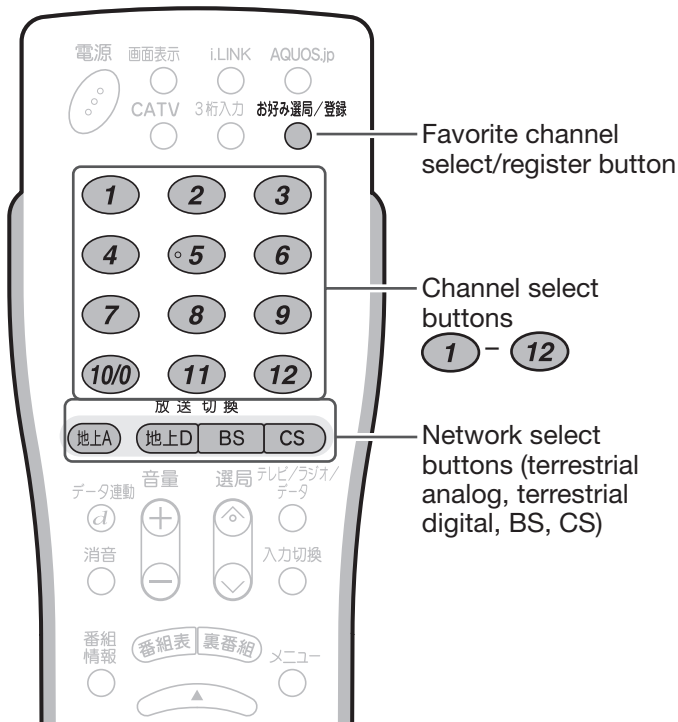

### Selecting terrestrial analog (VHF/UHF) channels

- ① Press 地上A to select terrestrial analog broadcast.
- ② Press 1 - 12 to select the desired channel.

### Selecting digital channels

- ① Press 地上D, BS or CS to select the desired digital broadcast network.
- ② Press 1 - 12 to select the desired channel.

#### Types of broadcast

- 地上A Terrestrial analog: Conventional VHF/UHF broadcast
- 地上D Terrestrial digital: Terrestrial digital broadcast
- BS BS: BS digital broadcast
- CS CS: CS 110 digital broadcast

■ For details about channel selection, see page 74.

### Selecting favorite channels

- ① Press お好み選局/登録 to display the registered channel screen.
- ② Press 1 - 12 to select the desired channel.